

solaredge

■ Located at the upper left corner

LED color	Function	Indication	Troubleshooting
●	Flashing	An invalid packet: bad baud rate, bad CRC, noise, bad parity, etc.	Check that the communication wires are connected correctly.
	ON	The address is set to zero: an invalid choice	Check that the Device ID is set to 2 in the RS485 Conf screen.
	Flashing with yellow LED	A possible address conflict (two devices with the same DIP switch address).	Check that the Device ID is set to 2 in the RS485 Conf screen.
●	Flashing	Valid packets addressed to different devices.	N/A
●	Flashing	A valid packet addressed to this device	N/A

